



# Example of Dry Swale

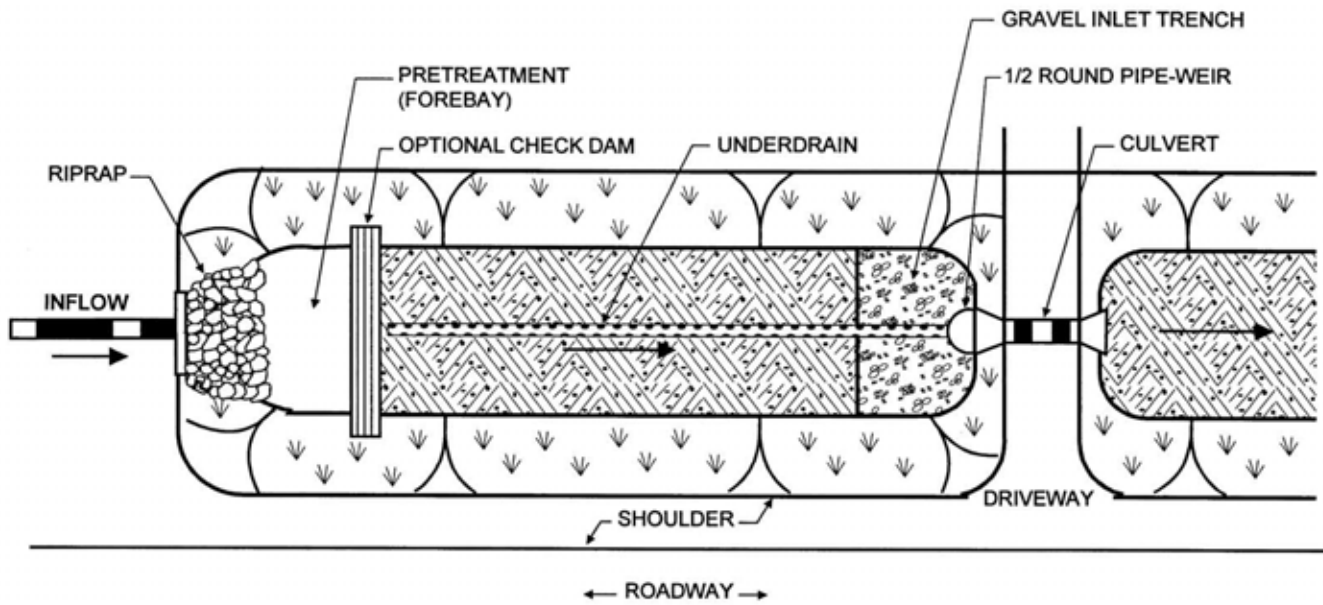

PLAN VIEW

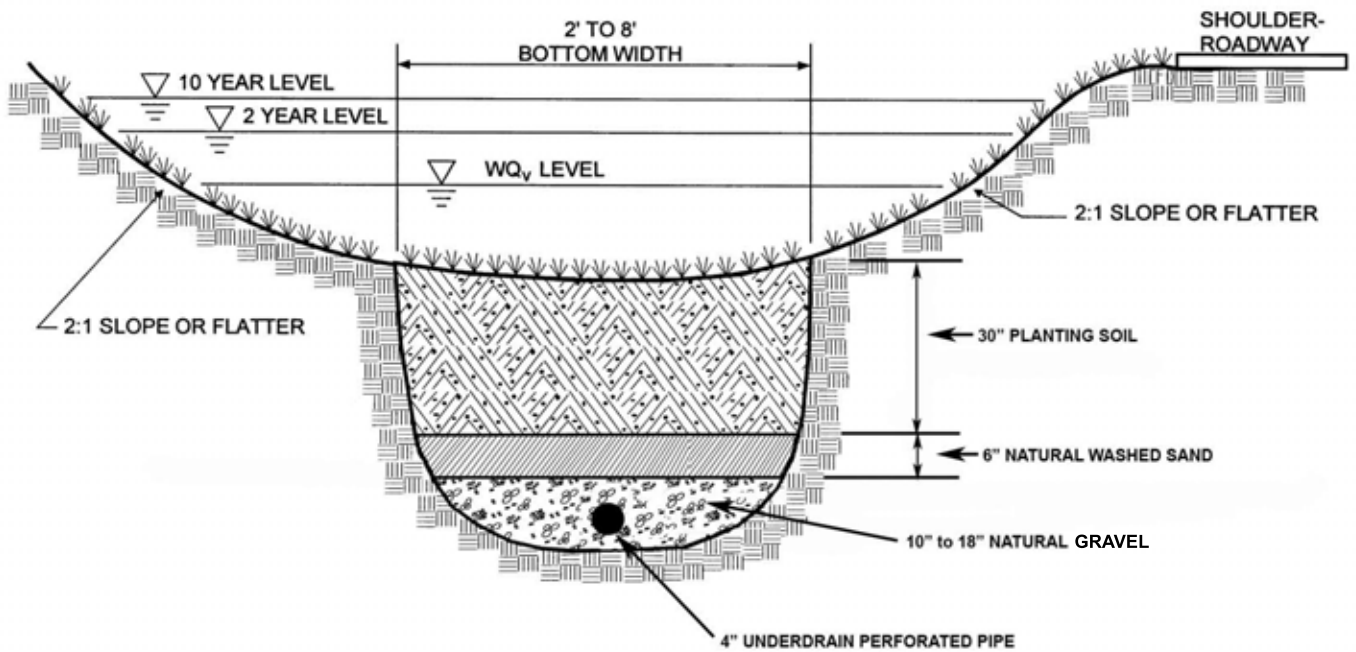

SECTION

Dry swales are used at low density residential projects or for very small impervious areas.